

Introduction


TWIN series TW GR6 receiver features a new stable TW protocol which benefits from simultaneously integrating dual active 2.4G frequency bands. The TW active-active protocol is different from the general active-standby redundancy solutions (where one receiver takes over signal control only when the other is in Failsafe mode), with the TW protocol, dual 2.4G frequency bands are active on the TW series receiver at the same time.

This receiver is designed for rc users who want to benefit from resilience and long range in their radio communications, typically up to tens of kilometers is achievable. TW GR6 receiver features an upgraded high-precision variometer that gives pilots a quick, accurate altitude and vertical speed data, and is ideal for any type of glider pilot.

The TW GR6 receiver is equipped with 2x 2.4G antennas. The signal output ports include one SBUS output channel and 6 PWM output channel ports. It also supports telemetry functions through FBUS / S.Port. By setting the TW GR6 to use FBUS protocol in the ETHOS system, the signal control and telemetry can be connected to any device that supports FBUS protocol through only one line to achieve bidirectional transmission, also simplifying the model build using fewer wires. In addition to all this, the inverted S.Port on the receiver can allow for easily connecting flight controllers.

In addition, TW GR6 also supports 4ms race mode with ultra-low latency. When combining race mode with TW series resilient dual 2.4G solution, racers have a fast, stable, and reliable signal in racing competitions, without fear of signal loss due to interference.

Overview

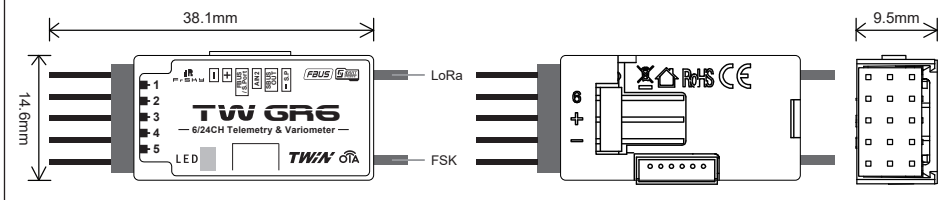

Specifications

- Frequency: Dual 2.4GHz
- Dimension: 38.1*14.6*9.5mm (L*W*H)
- Weight: 5g
- Operating Voltage: 3.5-10V (Please ensure the supplied voltage exceeds 2.8V during the use.)
- Operating Current: 60mA@5V
- Variometer Measurement Range
 - Altimeter Range & Resolution: -700m to 10000m & 0.1m
 - Vertical Speed Range: ± 10 m/s
- Voltage Measurement Range via AIN2 (External device): 0-36V
- Antenna connector: IPEX4
- Compatibility: TWIN series Radio & RF module in TW mode.

Features

- Simultaneous working dual 2.4G TW mode
- High-precision variometer sensor
- Black-Box function

- 4ms race mode with telemetry
- Long control range (Range varies based on the RF Power settings.)
- Over-The-Air (OTA) FW update
- 6 PWM channel ports
- SBUS Out (Supports 16CH / 24CH mode)
- FBUS / S.Port
- Inverted S.Port

Registration & Automatic Binding

Follow the step below to finish the registration & binding procedure:

1. For TWIN X Lite as an example, enter into the Model, select RF System, turn on the internal module, select status [ON] and TW MODE(Type), then select [Register].
2. Connect the battery to the receiver while holding the button on the receiver. The RED LED and GREEN LED on the receiver will be on, indicating into the [Reg] status.
3. When it shows the Register ID, RX name and UID, click [Register]. The RED LED and GREEN LED on the receiver will flash, and the transmitter displays [Registration OK].
4. Power off the receiver.
5. Move the cursor to select any one of the 3 receivers and press [Bind].
6. Connect the battery to the receiver.
7. Select the RX, the GREEN and BLUE LED will keep lit, then the transmitter displays [Bind successful].


Note: Once the receiver is registered, the button is not needed anymore in the binding process.

LED State

Status	Green LED	Blue LED	Red LED
LoRa	-	On	Off
FSK	On	-	Off
Failsafe	Off	Off	On

How to set the altitude telemetry data

1. Bind the receiver with the built-in variometer sensor to the transmitter.
2. Enter [Model] menu and use [Telemetry] tool.
3. Discover new sensors and then the [Altitude] data should keep flashing in the list.
4. Holding the [Altitude] bar can call the [Edit] menu out.
5. The telemetry data like [Range] and [Unit] of the variometer can be set now.

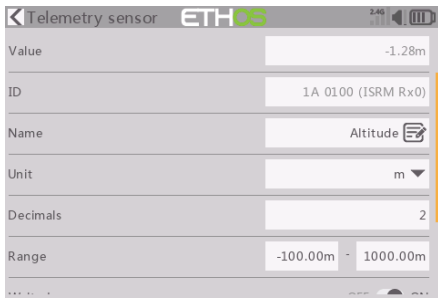

How to switch the S.Port/F.Port/FBUS

Enter into the Set-Options, click the Telem.Port, and select S.Port/F.Port/FBUS.

How to switch SBUS channel mode

Enter into RX Settings, click [SBUS], then select SBUS-16 mode or SBUS-24 mode.

How to enter into 4ms race mode

Enter into Model-RF system, select the Channel Range as CH1-CH8. Click [Switch Positions] and select a switch to start 4ms race mode.

About OTA function

Go to the [File manager], and select the FW, press the enter button, select [Flash RX by int.OTA]. Power on the receiver, select the RX, go to the [ENTER], complete the flash process, the transmitter will display [Success]. Wait for 3 seconds, the receiver works properly at the moment.

Note: Please do not do the binding operation in the near range while the firmware upgrading in progress.

Note: Update the firmware after the receiver getting registered (OTA).

FCC STATEMENT

Product certificated FCC ID: XYFTWINXLITE

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference.
- 2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate transmitter frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to transmitter communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to transmitter or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced transmitter/TV technician for help.

FrSky is continuously adding features and improvements to our products. To get the most from your product, please check the download section of the FrSky website www.frsky-rc.com for the latest update firmware and manuals