



CI27AI 1.0

SENTRY AI SPY DRONE

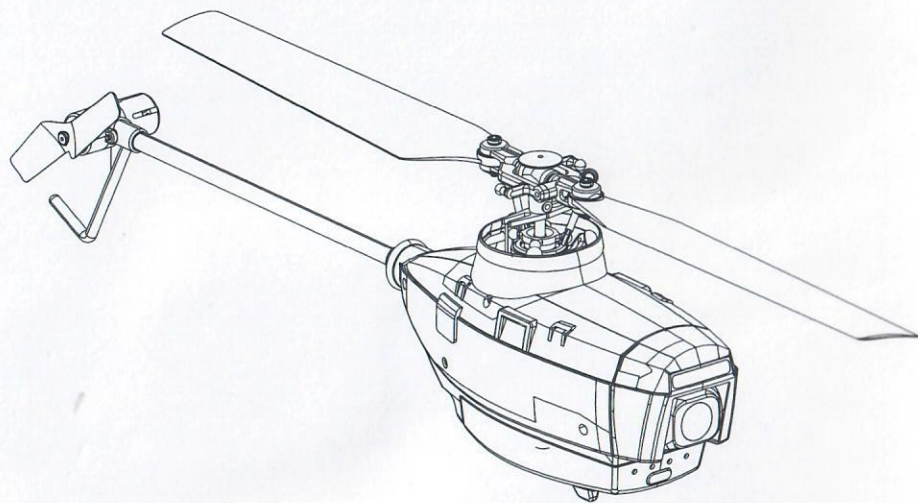

CI27AI 1.0

SENTRY AI SPY DRONE

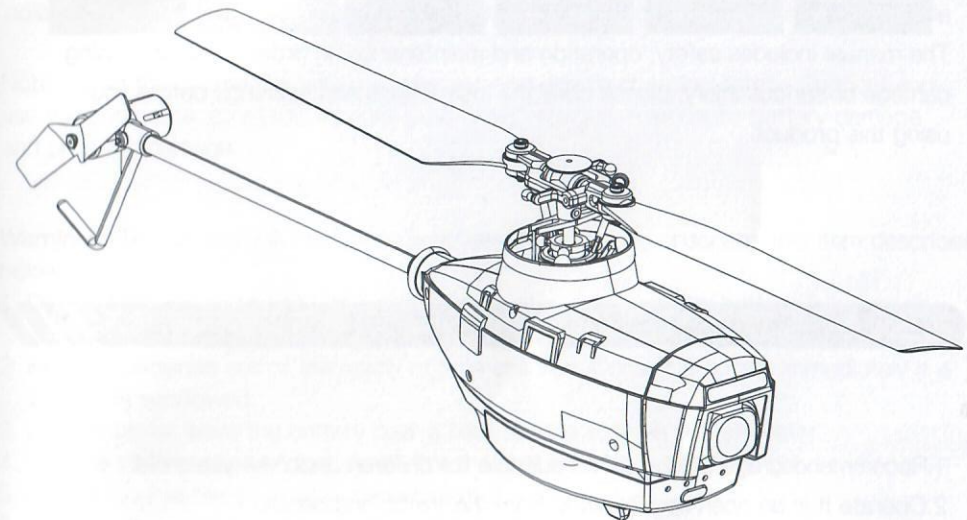

RCERA®

■ Please read the manual to learn the function of the this product before operation. Damage to the product and potential personal injury may occur if you make an operational error.

This is a RC helicopter, not a toy. You should not only have a prudent operation, but also to have an operational basis. All children using it should be under adult supervision. The manual includes safety, operation and maintenance. In order to avoid causing damage or serious injury, please obey the instructions and warnings before you using this product.

Additional safety precautions and warnings

C127 AI

1. Recommended age of users: Not suitable for children under 14 years old.
2. Operate it in an open space, away from the traffic and people.
3. Obey the instructions and warnings, includes the use of optional equipment.
4. It has to stay away from chemicals. Small parts and electric equipment must be out of the reach of children.
5. Keep away from water because this product has no waterproof function.
6. Do not put any parts in the mouth, it will cause injury or death.
7. Don't operate the model if the transmitter's battery is in low voltage.
8. Don't view the beam of the light emitting diodes, it would effect the eyesight.
9. The motor and electric equipment will be heat after flight. Please do not touch them to avoid scald.
10. In order to avoid causing damage, please do not touch the high-speed.



Note: Using the original factory USB charger can ensure charging safety. Suggest you use the original factory USB charger part, other chargers may cause battery damage and property damage.

Warnings! The battery will fire, explode or leak if not strictly observing this item described below. :

1. Do not immerse the battery in water or seawater, and keep the battery in a cool dry environment during stands by period.
2. Keep all batteries out of the reach of little children. Consult a doctor immediately if a battery is swallowed.
3. Do not use or leave the battery near a heat source such as fire or heater.
4. Use the battery charger specifically for that purpose when recharging.
5. Do not reverse the positive (+) and negative (-) terminals.
6. Do not connect the battery to an electrical outlet.
7. Do not dispose the battery in fire or heat.
8. Do not short-circuit the battery by directly connecting the positive (+) and negative (-) terminals with metal objects such as wire.
9. Do not transport or store the battery together with metal objects such as necklaces, hairpins etc.
10. Do not strike or throw the battery against hard surface.
11. Do not directly solder the battery.
12. Do not unpack the battery with a nail or other sharp object.
13. Never disassembling the battery in any way.


Note: The battery can not be placed for a long time under full power and low power.

Otherwise, the battery will not be charged or the battery will be wrapped. For long-term storage, please charge the battery to 3.7V, display two bars of power, and store it in a dry and safe place.

Helicopter parameters


C127 AI

pixel	1080P
Lenght	214 mm
Height	80 mm
Weight	75G
Propeller lenght	214 mm
Tail rotor blade diameter	37 mm
Battery specification	580mAh
Flight time	About 15 min
Charge time	About 75 min

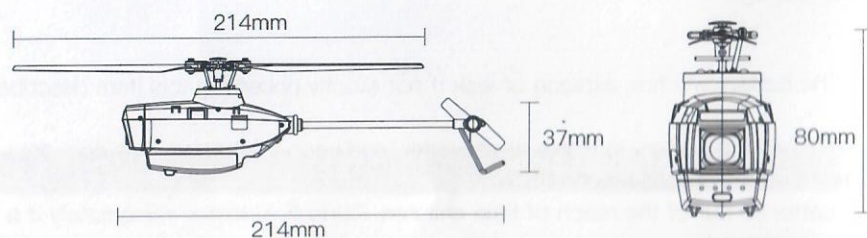


Packaging list

C127 AI

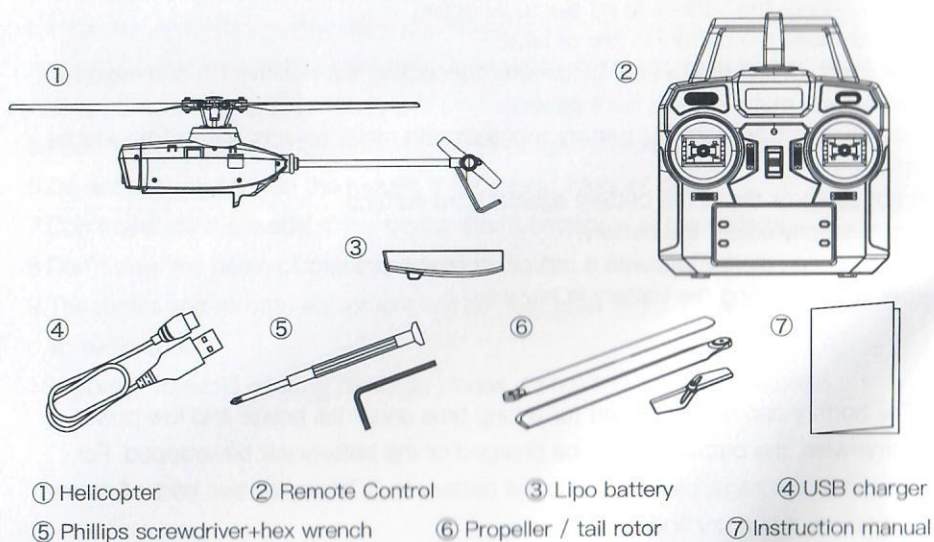


Introduction of transmitter function

C127 AI

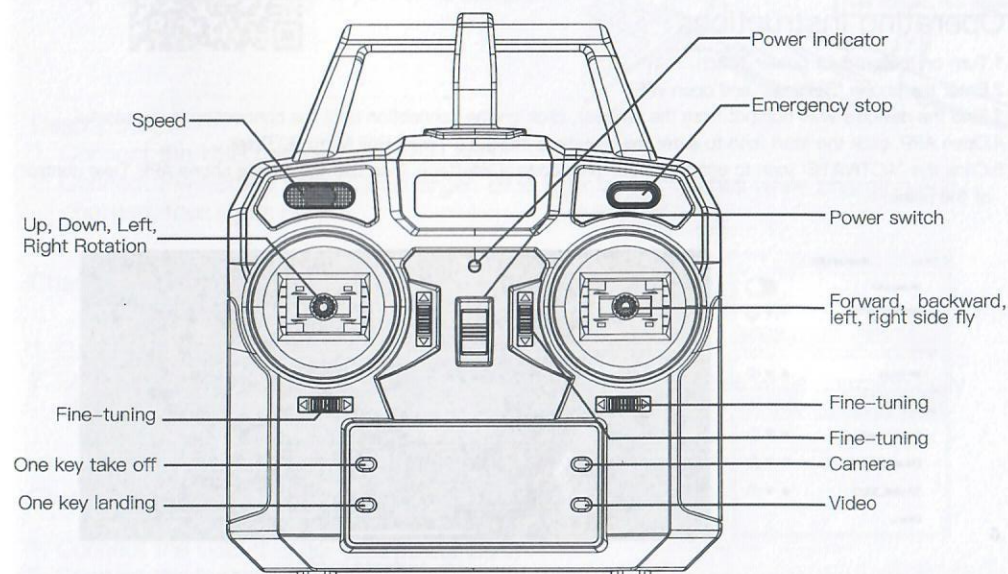

PARTS

C127 AI

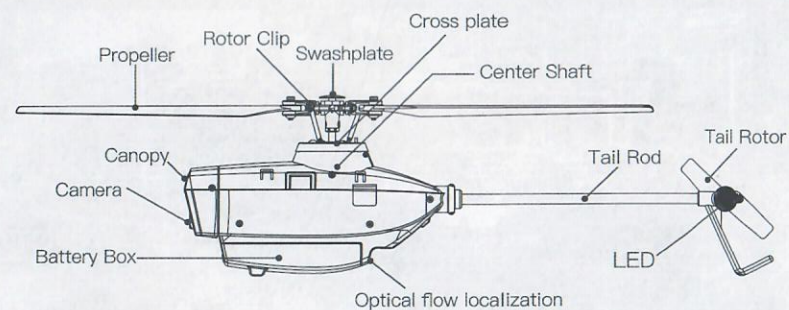

Install mobile phone client

Please scan the corresponding QR code to download APP




Operating instructions

1. Turn on the product power switch.
2. Enter the phone "Settings" and open WIFI.
3. Find the device's WIFI hotspot from the WIFI list, click on the connection until the connection is successful.
4. Open APP, click the start icon to enter the real-time interface THRO Roll Mirro 30 Displ.
5. Click the "ACTIVATE" icon to enter the real-time control interface, then use the mobile phone APP Take control of the plane.



Scene application identification (effective identification of 80 types of targets)


1. Set the required function inside the image recognition setting button, you can experience.
2. Lock the target shooting (note that when used in light wind conditions, the helicopter will rotate to follow, can not follow forward and backward)
3. Simulate human movement posture, identify the direction of the human body, more fun.

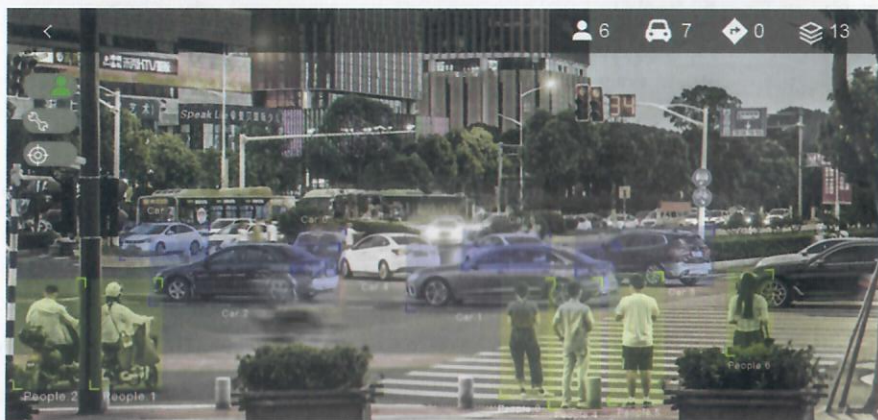

Batteries Charging Method

Charging method 1

Charging battery by the USB port on a computer.

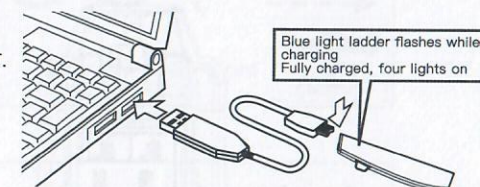

Description:

1. Connect the USB charger with USB port.
2. Connect the battery with USB charger: Blue light ladder flashes while charging Fully charged, four lights on

Charging method 2: Charging battery by power supply adapter.


1. Connect the USB charger with power supply adapter.
2. Connect the battery with USB charger: Blue light ladder flashes while charging Fully charged, four lights on


Charging method 3: Charging battery by power bank

1. Connect the USB charger with power bank.
2. Connect the battery with USB charger: Blue light ladder flashes while charging Fully charged, four lights on

First flight preparation CAUTION

1. ensure sufficient power supply of the transmitter and helicopter.
2. Keep a flight in a suitable space which away from the traffic, people, electricity pylons and pool.
3. Do not lock the main rotor screws too tightly to keep folding smoothly. If the main rotor screws are too tight, the helicopter will shake when flying.
4. Under emergency situation, you can press "sharp stop" button for 3" to land the helicopter without rotating.
(Note: this action may cause helicopter crash.)

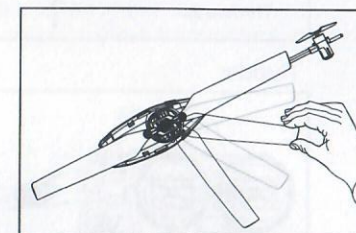

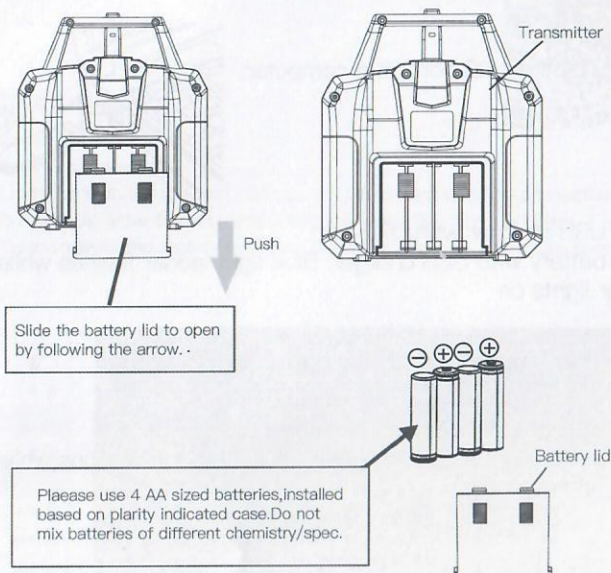


Direction of operation


C127 AI

If you're not familiar with the controls, take a few minutes to familiarize yourself with them and then try your first flight.


Throttle

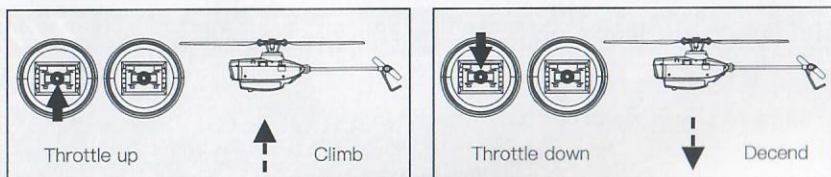


Rudder

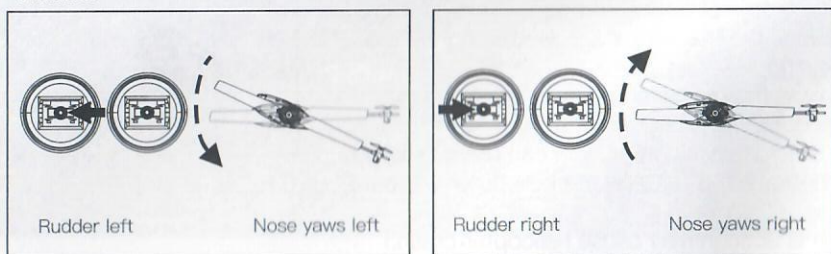

Elevator

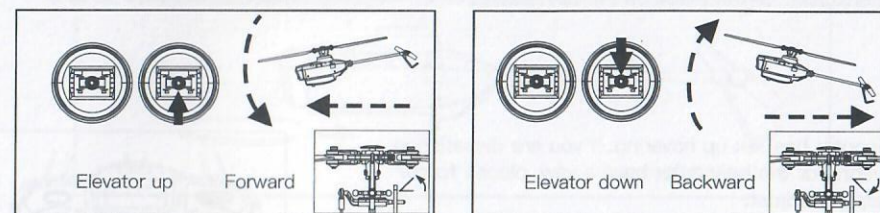

Aileron

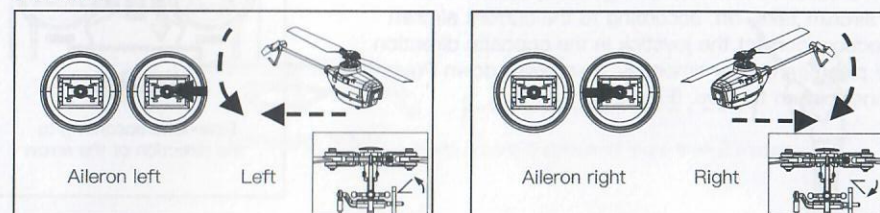


Flight Operation Steps

C127 AI


1. Turn on the transmitter and let helicopter stay near to transmitter.
2. Install the aircraft battery in the battery compartment safely and securely. Press the power switch for 2 seconds to turn on the aircraft power.
3. The lights of the helicopter and the remote control flash at the same time. Then push the throttle stick from top to bottom quickly. The remote control makes a 'DI' sound, and the indicator lights of the helicopter and remote control are always on, which means binding successful.
4. Pull the two joysticks to outer eight angles to start the helicopter. (You can also press the one-key takeoff button to take off the helicopter directly.)
5. Keep the helicopter head forward, and keep safe distance with the helicopter.
6. When manually operating the aircraft to land, please keep the throttle stick at the bottom for 2-3 seconds, and then release it after the propeller has completely stopped rotating. (This operation is not required when using the one-key landing function)
7. When taking photos or recording videos, it needs to be used with the APP connected.

△Note: 1. In order to avoid hitting, do not look at the helicopter at hip level when it fly.
2. In order to avoid distractions, please confirm without other transmitters at work around.

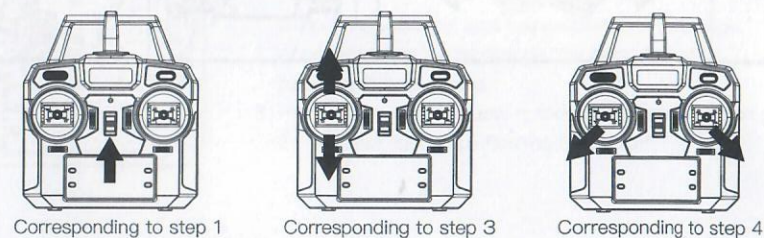


The helicopter has set up hovering. If you are dissatisfied with hovering or the helicopter have a yaw, please follow there steps to adjust.


Go down 3 seconds into fine tuning mode, control the throttle aircraft take-off, according to the current aircraft yaw Direction, correct the joystick in the opposite direction until the plane can hover smoothly, then press down Press the spinner button to save. (Figure 1)

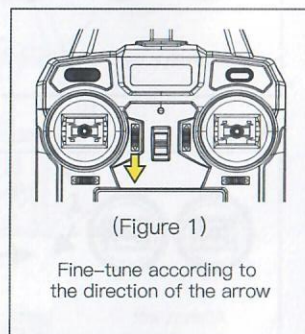



Forward/ backward Yaw			Fine-tune according to the direction of the arrow
Left/right Yaw			Fine-tune according to the direction of the arrow
Side fly Yaw			Fine-tune according to the direction of the arrow

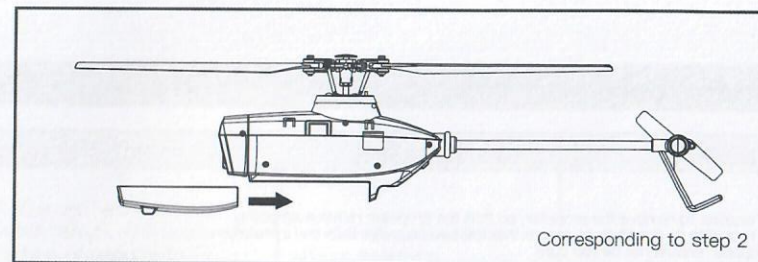

Note: Beginner should pay attention to the direction of flight. Keep the head forward to avoid causing injury .

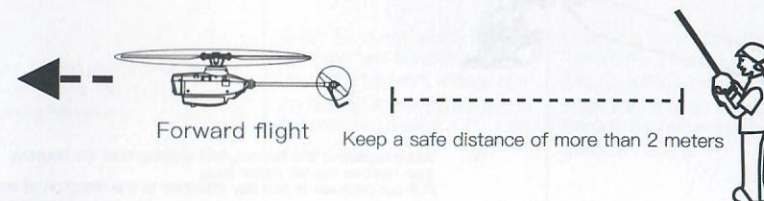


Note: Beginner should pay attention to the direction of flight. Keep the head forward to avoid causing injury .

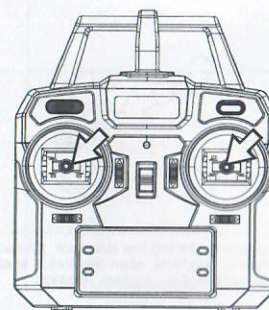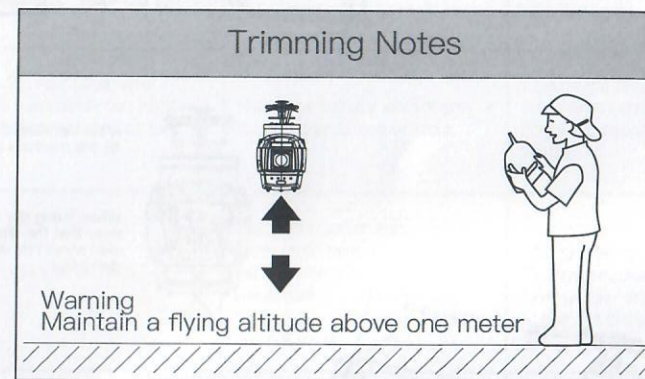



Gyro calibration method

1. When flying yaw, first land and calibrate the gyroscope.
2. When calibrating the gyroscope, the aircraft must be placed on a level ground.
3. The indicator light will flash quickly during the calibration process, the indicator light stops flashing to take off.

Use Hexagon wrench to remove the propeller, so that the propeller rotation smoothly, pay attention to a with A, B with B, to ensure that the two propeller balance, installation of the new propeller should not be too tight

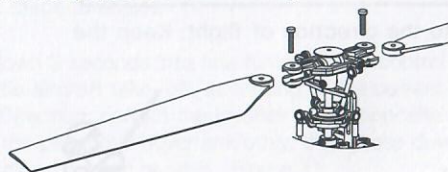


When replacing the tail rod, first disassemble the housing, then remove the tail motor plug, Pull out backwards and pay attention to the direction of installation

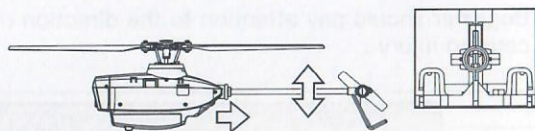


After installing the tail Rod, fix the machine shell screw

When fixing the screw, please note that the direction of the tail skid should be vertical and not deflected

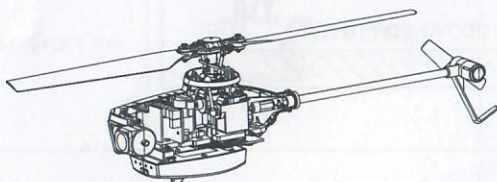

When changing the steering gear, pay attention to the direction of connecting Rod. When changing other internal parts, pay attention to the installation order and position

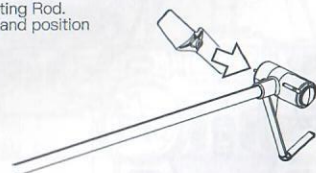

When removing and replacing the tail rotor, please pay attention to the direction, align the motor shaft and press it slowly to ensure smooth rotation.

	Problem	Possible cause	Solution
1	Turn on the helicopter power switch, taillight continuously flashing, no response to operation.	The helicopter without bind with the transmitter.	Bind the transmitter again
2	After turning on the chopper power switch, the chopper Nothing happened.	Check the power supply of helicopter and transmitter; Check the battery's voltage of the helicopter and transmitter; Batteries had a poor connecting.	Check the installation site of Transmitter's batteries; Use full voltage batteries; Install the batteries again; Confirm the batteries have a good connecting.
3	Push the throttle but the motor not at work, the receiver's signal light keep flashing	Helicopter's battery has a low voltage; The lipo battery has a poor connecting.	Charge the battery or change a full charge battery; Connect the battery with receiver again.
4	Turn on the helicopter after bind, the main blade can rotate but the helicopter can not take off	Helicopter battery low voltage, tail propeller Loose or stuck.	Charge the battery or change a full charge battery; Press the main shaft and gear tightly
5	The helicopter is violently shaking	Main rotor deformed cross shaft bent tail rotor bent Blade clamp screws are too tight to cause the main blade can not rotate	Change the rotor head; Change the cross shaft; Change tail rotor; Loose the blade clamp screw.
6	Helicopter spinning to left after take off.	Tail motor has a poor power; The blades loose; Tail motor was broken.	Check the connection of tail blade and motor shaft. if loose, change tail blade or tail motor.
7	The helicopter has a little yaw:	made a operational error of the trimming button	1.According to its yaw direction, push the trimming button in the opposite direction; 2.Reset the hovering point.
8	The helicopter has a serious yaw.	Steering gear damage Cross disc fracture Connecting rod fall off	Check the servo if work properly; Check the swash plate; Check the rod sticks if loosing.